go displays

Streamline Exhibition Stand

 


Scan our OR code to view the full assembly video




Step 2 Place the chrome insert on top of the black base and screw the bottom section of the pole into the base.





Step 1

Place the contents of your Streamline stand on the floor and carefully remove the rolled graphics from the storage case.

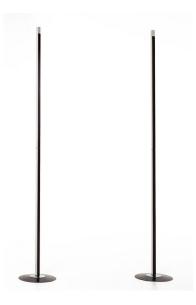

Step 4 Complete this process for all poles.



Step 5

Attach the graphics by hooking them over the top section of the pole. The grey hooks are located in the top corners of each panel.

Once hooked, glide the side of the panel down the magnetic pole.



Step 6

Continue with the process until you have assembled all panels and your backdrop is complete.



Removing Graphics From Case



Step 1
Locate the first graphic panel as indicated by the yellow slip



Step 2
Coil the graphic panel inwards, with both hands.

Remove the panel as shown in the illustration



Step 3

Lift the graphic panel out slowly making sure you do not catch the panel on the remaining graphic panels.

Then follow the assembly instructions on attaching the graphic panels



Step 4

The remaining graphic panels are shown in the storage case.

Follow steps 1 to 3 until all the graphic panels have been assembled

Streamline Display Care Sheet

Storing your graphics










- Store your graphics in the case provided, do not roll them too tight as this can permanently curl the panels.
- Place into the case one at a time/remove one at a time

Panels not lining up correctly?

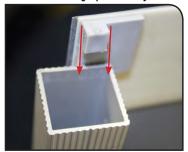



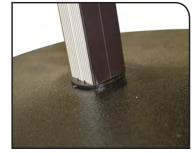

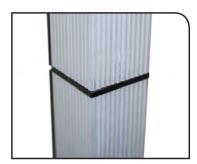


Correct

• Make sure poles are inserted properly and screwed to the base evenly

- Check the panels are attached on the pole (top of the frame) correctly
- We do have an industry standard and allow for a 2.5mm tolerance per panel, 5mm over two panels. However we try to better this tolerance


Magnets not working?

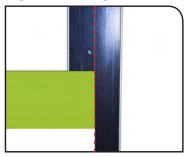

• Check the graphic panels are lined up with the centre line of the magnetic bar, if this overlaps by just a little it will give the appearance that part of the magnetic bar will not work

Removing graphic panels



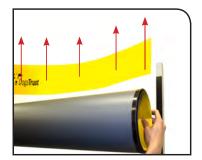

• Curl the graphic panel from the bottom and lift vertically

Marks on your graphics?







• Use a cloth dampened with tepid water (no chemicals) and gently rub over the mark. This should resolve your issue