go displays

Modulink Arch



Scan our QR code to view the product Video

For the arch you'll be supplied with a built end column and the arch top panel







Place the arch template on to the top of the panel where you'll be joining the arch to your Modulink backdrop. Making sure the central arrow is in the centre of the panel.



Step 2


Secure the template onto the panel using tape along the top edge and 2 sides.



Step 3

Using a screwdriver, push through the labelled holes on the template, pushing all the way through the panel. This creates screw holes for fitting the arch panel.

go displays

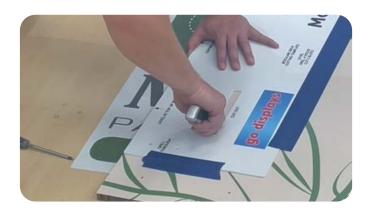

Step 4 Use a Stanley knife to cut the panel within the cut out slots on the template.




Step 5 Turn the panel over, and go through the cuts at the back of the panel with the Stanley Knife.


This will ensure the cut out goes right the way through the panel.



Step 7 Remove the template from the front of the panel.

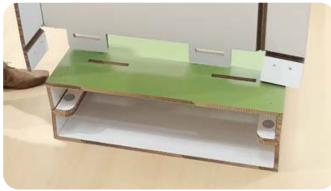

Step 8 Take the assembled end panel and lay this down, inserting the overhead arch panel tabs in to the slots.

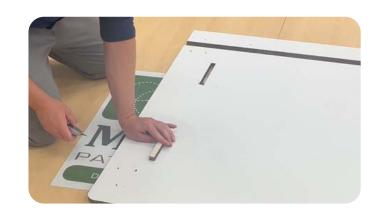

Step 6 Both cuts out are then able to push out of the board, leaving the spaces empty, ready for the arch tabs.



Secure the tabs into place on the inside of the column by inserting the stoppers into the tab slots.

go displays



Step 10

Fold the side tabs in so they are sitting flush on the arch panel. Place a washer over the screw, pushing the screw through the tab and arch column.



Step 13

Connect the top arch on to the earlier panel where the cut outs were made. Slot the tabs in to those cut outs, secure into place as per **steps 10 & 11.**



Step 11

Add a washer to the underside of the screw and finish with a wing nut.
Complete this process on all 4 holes.





Once the top arch panel has been secured, lift the arch column into a standing position.





When fitted correctly, the top arch panel will be flush with the end panel.

