

## Panelfix Display Board



Scan our QR code to  
view the full  
assembly video



You'll receive loop  
nylon panels, poles  
and bases.



### Step 1

Take 1 base and pole and screw  
the pole into the base until tight  
and secure.  
Complete for both poles & bases.



### Step 2

Lay the pole down and slide 1 clip  
down each pole, right down to  
the base.




### Step 3

Fix the other 2 clips to the top of each  
pole with the screw located at the side.  
This will secure the clip at this height.




## Step 4

Using the secured clips at the top of the pole, slot the clip into the top of the display board on both sides.

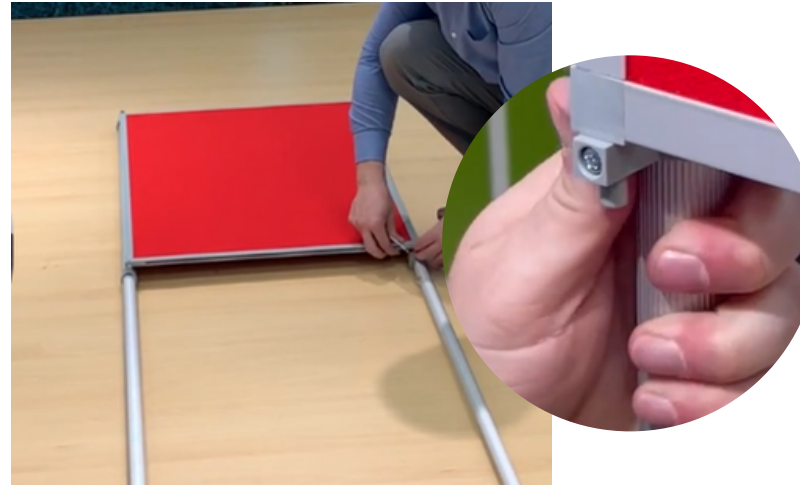

## Step 5

Slide the bottom clips until they reach the bottom of the display board. Slot into the bottom of the board and screw into place.

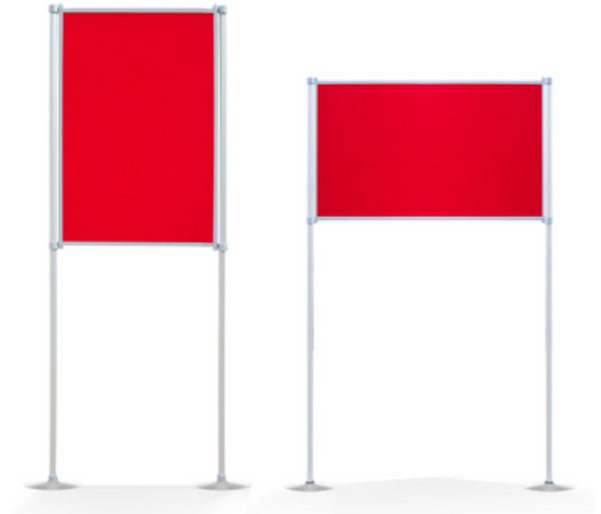

## Step 6

Repeat the process to ensure all 4 clips have been clipped into the board and the screws have been tightened to the pole.