

Saxon Plinth



Scan our QR code to view the full assembly video




You'll receive front/side panel, printed top and screws.




Step 1

Stand the front/side panel up right. Using the fold lines, create the square base.

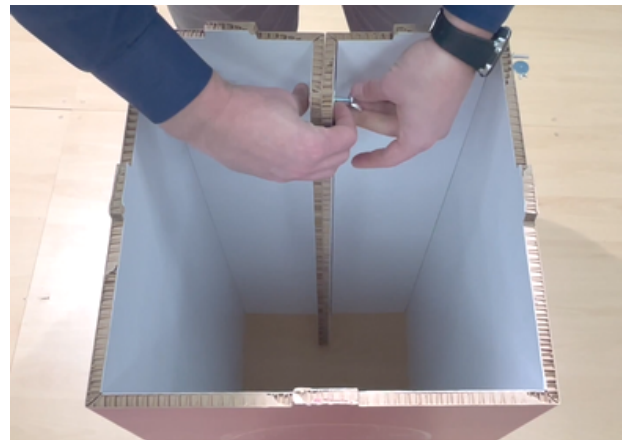

Step 2

Bring the 2 tabs into the centre of the hollow space. Secure the top with the screw, washer and wing nut.

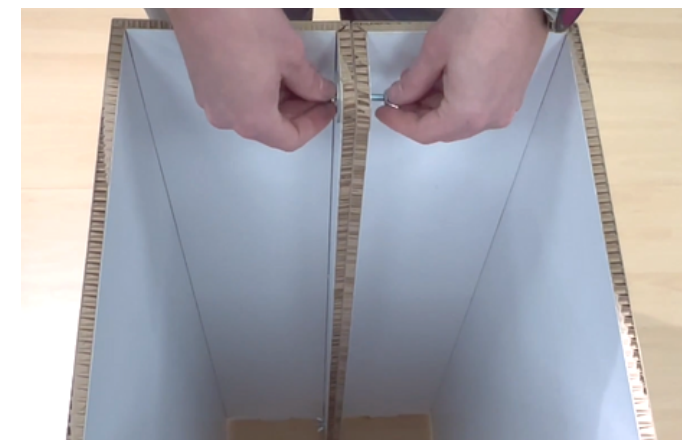

Step 3

Turn the base upside down, and repeat the process by securing the tab with the supplied fixings.



Step 4

Rotate the square base again, so it's the correct way up and has the tabs pointing upwards. Position the plinth top on to the tabs to secure in place.

