

## Desktop Sneeze Screens



Scan our QR code to  
view the product Video




You'll receive x2 poles, x2  
washers (2 for each side) &  
x2 bolts.



### Step 1

Before drilling, mark the position of  
the poles and drill point.  
Drill through your marked area and  
add x1 washer to the top of the desk.

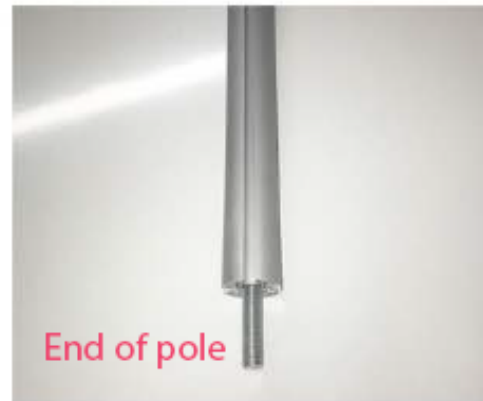

### Step 2

Thread the end of the pole through the  
washer and drilled hole within the desktop.



### Step 3

Once you have the end of the pole showing through the under side of the desk, place the washer followed by the bolt and fasten until tight.



### Step 4

Take a corner fitting and drop down the channel section on the pole, secure with a screw driver. Add Sneeze panel and position on top of the corner fittings.



### Step 5

Insert the top corner moulding. Secure into position with a screwdriver.

