

Sovereign Media Stand



Scan our QR code to view the full assembly video




You'll receive front/side panel, banner, counter top & fixings.



Step 1

Stand the front/side panel up right. Using the fold lines, create the square base.

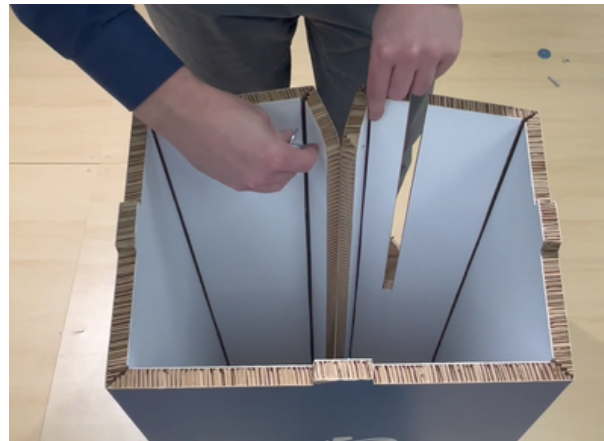

Step 2

Bring the 2 tabs into the centre of the hollow base. Secure the top with the screw, washer and wing nut. Repeat the process on the bottom by turning upside down.



Step 3

Turn the square base the correct way up with the tabs pointing upwards. Place the top into place, making the sure the cut out is inline with the base cut out.



Step 4

Unfold the banner and slot into the counter top, through to the base.



Step 5

Slide the banner down the full length of the base until the banner reaches the floor.

