

## Modular Protection Screens



Scan our QR code to  
view the product Video



### Step 1

Place the round base on the floor and screw the pole into the base using the thread at the end of the pole.



### Step 2

Slide a corner moulding down 1 of the 4 channels on the pole.



### Step 3

Secure the moulding in place with a screwdriver. Set at the correct height for your protection screen. Repeat this process on any remaining poles.




### Step 4

Lift the panel on top of the corner fittings. The corner fittings fit into the frame of the acrylic panel.



## Step 5

Slide 1 corner moulding down each pole, this will slot into the top corners of the display panel. Twist the pole for easy access to the screw within the corner fixing & secure with a screwdriver.

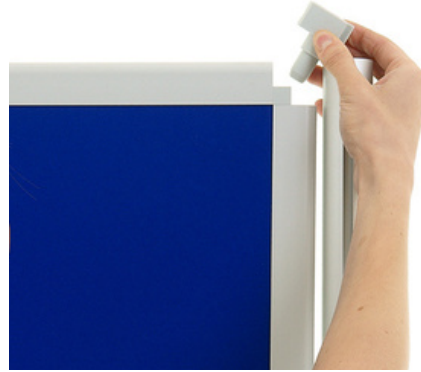

## Step 6

Insert the top corner fixing, twist the pole for access to the screw and secure.

